
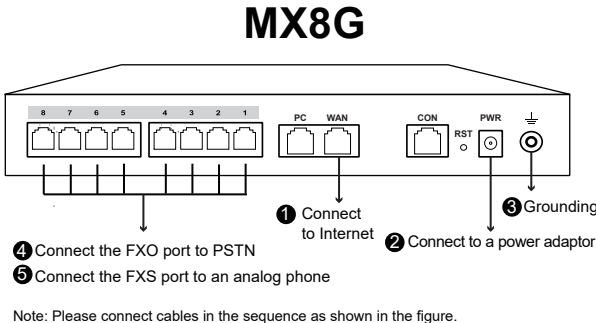


HX4G/MX8G

Quick Reference Guide

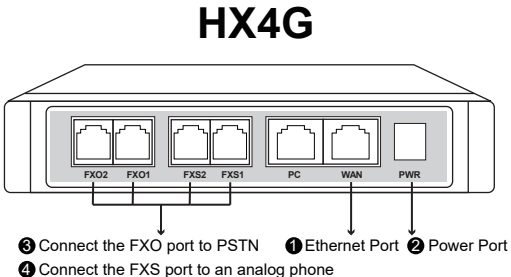

Accessories


No.	Description	Qty
1	Main Body	1
2	Power Adaptor	1
3	Ethernet Cable	1
4	Quick Reference Guide	1
5	Grounding Cable*	1
6	Rubber Foot*	4

Note: The items marked with an asterisk(*) are supplied with MX8G only.

LOG INTO THE DEVICE

- Dial ## to obtain device IP address by an analog phone.
- Ensure your PC and the device is on the same network segment.
- Enter the device IP address(default: 192.168.2.218) in the browser address bar.
- Enter password(see the initial password at the rear label of the device).

- Do not connect the POTS telephone line and PBX phone line to FXS ports.
- To restore the factory defaults, press and hold the RST button for 3 seconds.
- To ensure maximum compatibility, use only the power adapter delivered with the product.

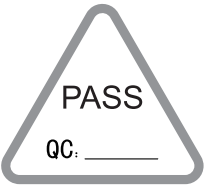

WARNING